

PROGRAMMING RCV RADIATORS

Once installed and connected, the radiator is on **STAND-BY** position.

Press the **STAND-BY** button to connect the radiator. Press OK.

To access the clock and date press the **MENU** button just once. The clock will be displayed and the hour will start to flash. Please press UP or Down in order to select the current hour. Press OK and then please select the minutes with the UP or Down. Press Ok and the day of the week will be displayed (dd Lu = Monday / dd MA = Tuesday / dd ME = Wednesday / dd JE = Thursday / dd UE = Friday / dd SA = Saturday / dd di = Sunday). Press OK to confirm and the temperature of the room will be displayed.

If you wish to access the programming menu, please press the **MENU** button for 3 seconds.

t°C will be displayed, and the red Sun light will come on. This is the Comfort temperature (highest temperature we want on the heater), press OK and select the desired Comfort temperature with the UP/DOWN buttons. Press OK.

t° E is displayed, and the green Moon light is on. This is the Economy temperature, which should always be at least 3 degrees less than the Comfort temp. In order to choose the economy temperature, we press OK and we select the desired temperature with the UP/DOWN buttons. Press OK to confirm.

Pr04 is displayed. This is the programming menu. You can choose one of the pre-set programs shown on the instructions guide, or you can choose the bespoke program **USER**

Please press the UP or Down arrows to select the desired program and press Ok.

CONFIGURE YOUR PLAN TO YOUR NEEDS - USER

If you select the USER program, press ok and Lu:00 will be displayed.

Lu indicates that is Monday and 00 is the clock (midnight). We have to decide which temperature we want on Monday from midnight to 01:00h. If we want the Comfort we have to make sure that the red light is on the Sun, if we want the Economy the green Moon should be on. In order to select the desired temperature please press the UP or Down arrows. Once selected please press Ok.

Lu:01 is displayed. Now we have to repeat the process for the next hour. From 01:00 to 02:00.

We will have to repeat this process for the rest of the weekdays. If you want to go back to a previous time, please press the MENU button. Once you finish the last time slot of the week Sunday 23:00 – 00:00 (di:23) please press OK and the temperature of the room will be again displayed. You have now programmed your radiator.

Please make sure that the HAND light is off (if it's ON you should press the HAND button)

When the temperature of the room is displayed, you will see on the bottom of the screen either the sun light on (red) or the moon light (green). If the sun is on, the programming is on COMFORT temperature. If it's on the moon, it's on the economy temperature.