



HOW TO PROGRAM MY TE700I

Step 1: Using the right hand arrow to select the top icons, you must select first the sun icon. It should have a box outline around it, this means that it is selected, and this is the ideal temperature for your comfort. (ex. 23 degrees) Press the up and down arrows, change the temperature to your liking. Press OK.

Step 2: With the right hand arrow select the moon crescent so there is a box on the moon and press ok. Select your ideal economy temperature with the up and down arrows and then press ok. (Ex. 17-18 degrees.)

Step 3: Scroll with the right hand arrow to the Clock and press ok. Put the current time, press ok and change the number with the up and down arrows. First the minutes will flash, change the minutes, press ok and proceed to the hour and then press ok. The numbers above from 1-7 are the days of the week, day 1 is Monday. It goes from Monday to Sunday, 7 being Sunday. Choose the day of the week with the right hand arrow and press ok.

Step 4: Press the right hand arrow to select the last icon, the P. Press ok.

Step 5: Once you press ok, the numbers on the right hand corner should be flashing, select with the + and – buttons the program “U1”, or choose between the pre-set programs (P1/P2). Use the right hand arrow to select the day of the week to begin the programming and press ok. Day 1 being Monday.

Step 6: The programming time starts off from 00.00. Use the right hand arrow to scroll as you have to program each hour. Each line – is an hour as you can see the number at the bottom and on the right hand side.

There is one line that is higher, this is the comfort temperature. The hours you want to program with your comfort temperature, you must press the + button, it marks the higher dash line. Once you press + or – button it will automatically switch to the next hour, if you wish to go back to the previous hour, press the left hand arrow. Once you finish the whole day it will automatically mark day 2 and you will have to choose with the right hand arrow each hour and comfort or economy mode. Once all the days of the week are completed. Press ok and use the right hand button to go to Auto. Press ok and the programming is finished. Leave the outline box on the Auto, so your programming can come on.



USING THE MANUAL MODE

There are two ways to use manually your TE001,

1. Press the right/left arrows until you get to the Sun icon. Press +/- in order to select the desired temperature. If the comfort temperature is higher than the room temperature, you will see a flame drawing on the left, this means the radiator is heating. The drawing will disappear once it has reached the desired temperature. Remember that this temperature is used as the comfort temperature for programming, so whenever you have your thermostat in programming mode, it will reach this temperature.
2. If you are in Auto mode, you can press the +/- buttons to select your desired temperature, you will see a hand drawing on the top of the temperature, and on the left the flame drawing (if the radiator is heating). The device will remain in manual mode as long as you see the hand drawing. If at any time you switch to another mode using the right and left arrows, the thermostat will stop being in manual mode, and whenever you return to Auto, it will be on programming mode.